

		IGNITION COILS		
COILPACK PIN		COILPACK		
1/1b	T1/1	Connector3, Pin47	Connector3, Pin47	
2/15	T1/1	Common 12v	Common 12v	
3/1a	T1/1	Connector1, Pin2	Connector1, Pin2	
1/1b	T1/2	Connector3, Pin50	Connector3, Pin44	
2/15	T1/2	Common 12v	Common 12v	
3/1a	T1/2	Connector1, Pin9	Connector1, Pin4	
1/1b	T1/3	Connector3, Pin45	Connector3, Pin49	
2/15	T1/3	Common 12v	Common 12v	
3/1a	T1/3	Connector1, Pin7	Connector2, Pin12	
1/1b	T1/4	Connector3, Pin46	Connector3, Pin45	
2/15	T1/4	Common 12v	Common 12v	
3/1a	T1/4	Connector1, Pin5	Connector1, Pin7	
1/1b	T1/5	Connector3, Pin48	Connector3, Pin46	
2/15	T1/5	Common 12v	Common 12v	
3/1a	T1/5	Connector2, Pin12	Connector1, Pin5	
1/1b	T1/6	Connector3, Pin44	Connector3, Pin50	
2/15	T1/6	Common 12v	Common 12v	
3/1a	T1/6	Connector1, Pin4	Connector1, Pin9	
1/1b	T1/7		Connector3, Pin48	
2/15	T1/7		Common 12v	
3/1a	T1/7		Connector2, Pin6	
1/1b	T1/8		Connector3, Pin43	
2/15	T1/8		Common 12v	
3/1a	T1/8		Connector2, Pin5	
		FUEL INJECTORS		
INJECTOR PIN		INJECTOR		
Pin1	Y1	Common 12v	Common 12v	
Pin2	Y1	Connector3, Pin27	Connector3, Pin27	
Pin1	Y2	Common 12v	Common 12v	
Pin2	Y2	Connector2, Pin22	Connector2, Pin18	
Pin1	Y3	Common 12v	Common 12v	
Pin2	Y3	Connector2, Pin19	Connector2, Pin21	
Pin1	Y4	Common 12v	Common 12v	
Pin2	Y4	Connector3, Pin28	Connector2, Pin19	
Pin1	Y5	Common 12v	Common 12v	
Pin2	Y5	Connector2, Pin21	Connector3, Pin28	
Pin1	Y6	Common 12v	Common 12v	
Pin2	Y6	Connector2, Pin18	Connector2, Pin22	
Pin1	Y7		Common 12v	
Pin2	Y7		Connector2, Pin23	
Pin1	Y8		Common 12v	
Pin2	Y8		Connector2, Pin20	
ECU CONTROLS MAIN POWER RELAY WHEN CIRCUIT 15 IS POWERED! YOU CAN CONNECT ALL OF THE FUSED 12V WIRES TO THAT RELAY!				
OBD2 (16pin)				
4 Ground				
5 Ground				
6 CAN High				
7 Data link from ecu				
8 Ignition 12V				
14 CAN Low				
16 Battery 12V				